



# RELIABLE EQUIPMENT & SERVICE CO., INC.



REL-MGRD-TH  
Manual Temp.  
Ground Rod driver  
with handles



REL-MGRD  
Manual Temp.  
Ground Rod driver  
w/o handles



REL-GR-ADP  
Adapter for use with  
Stand. Ground Rod.

REL-MGRD-ROD  
Reusable Threaded  
Temp. Ground Rod



## REL-MGRD SERIES

### Temporary or Permanent Grounding System

The REL-MGRD-TH provides an effective alternative to auger type grounding devices in situations where the work surface is extremely hard or frozen.

A 5 foot section of 5/8 inch copper clad threaded ground rod is Included.

**OPTIONAL:** REL-GR-ADP - Ground Rod Adapter for permanent installation of standard 5/8" ground rod.

REL-MGRD-TH - Ground Rod Driver with Handles  
Size: 29-1/2" L x 7" W x 2-3/4" R      Weight: 28.5 lbs.

REL-MGRD - Ground Rod Driver without Handles  
Size: 29-1/2" L x 2-3/4" R                      Weight: 23.5 lbs.

### TEMPORARY INSTALLATION


1. Install & tighten thumb screw securing driver shaft.
2. Screw 5/8" threaded ground rod into threaded end of driver shaft.
3. Loosen thumb screw.
4. Grasp driver with both hands and impact rod down to desired depth.
5. Connect grounding cable from any equipment that is to be grounded to the temporary rod below driver body using a suitable connector clamp.

### REMOVAL OF TEMPORARY GROUND ROD

1. Remove cable from temporary ground assembly.
2. Impact driver upward to remove rod from ground.
3. Tighten thumb screw.
4. Unscrew rod from driver and store.

### RELIABLE EQUIPMENT & SERVICE CO., INC.

92 Steamwhistle Drive • Ivyland, PA 18974  
Phone: 800-966-3530 • Fax: 215-357-9193  
Visit us on the web at [www.Reliable-Equip.com](http://www.Reliable-Equip.com)

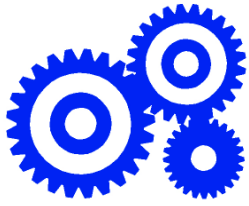

# RELIABLE EQUIPMENT & SERVICE CO., INC.

REL-MGRDH

Manual Ground Rod  
Driver with Handles



REL-MGRD-NH

Manual Ground Rod  
Driver w/o Handles



## REL-MGRD SERIES Manual Ground Rod Driver

The REL-MGRDH provide a safe effective method of installing a standard 5/8 ground rod without the use of a sledge hammer, or powered ground rod drivers.

**REL-MGRDH - Ground Rod Driver with Handles**

Drive Shaft: 29-1/2" L x 7" W x 2-3/4" R    Weight: 28.5 lbs.

**REL-MGRD-NH - Ground Rod Driver NO Handles**

Drive Shaft: 29-1/2" L x 2-3/4" R    Weight: 23.5 lbs.

### INSTALLATION

---

1. Install & tighten thumb screw securing sliding impact shaft.
2. Slide driver over ground rod.  
**Note:** Thumb Screw at Top.
3. Grasp driver with both hands and impact rod down to desired depth.
4. Tighten thumb screw securing the sliding impact shaft and remove driver from rod.
5. Install grounding assembly as required by application.

### DRIVE ROD BELOW GRADE

---

1. Remove grounding assembly.
2. Slide driver over ground rod.  
**Note:** Thumb Screw at Bottom.
3. Grasp driver with both hands and impact rod down to desired depth.

RELIABLE EQUIPMENT & SERVICE CO., INC.

92 Steamwhistle Drive • Ivyland, PA 18974  
Phone: 800-966-3530 • Fax: 215-357-9193  
Visit us on the web at [www.Reliable-Equip.com](http://www.Reliable-Equip.com)